



Checking the Battery Level

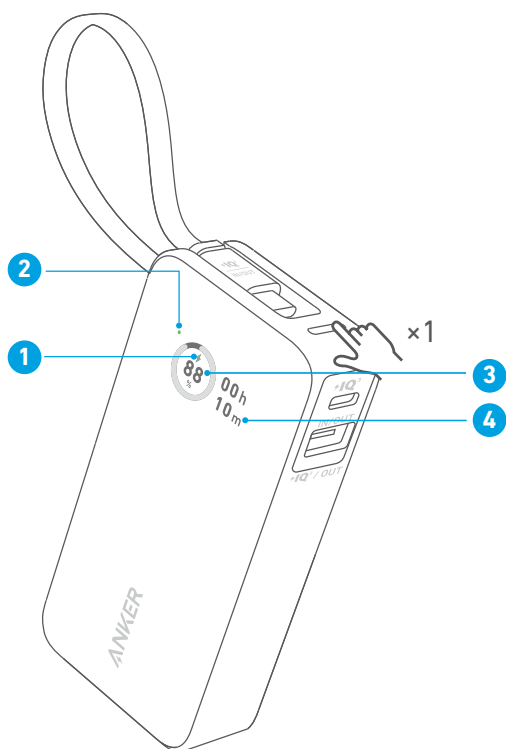


1. Recharging
2. Trickle-Charging Mode
3. Remaining Battery in Percentage
4. Remaining Battery Duration / Full Recharge Time

Note: Figures shown on the screen are for illustration purposes and subject to change. Please refer to the actual product.

Charging Your Devices

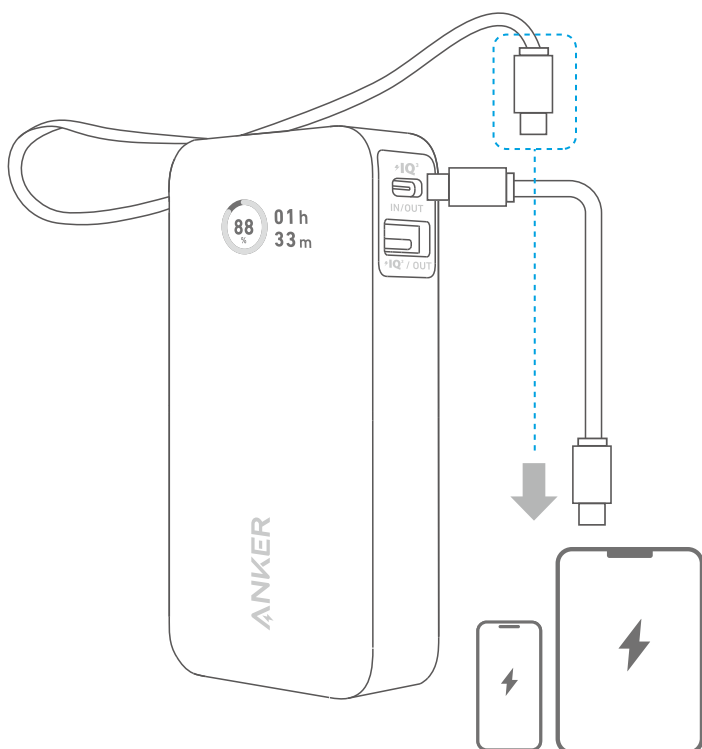


Recharging Your Power Bank

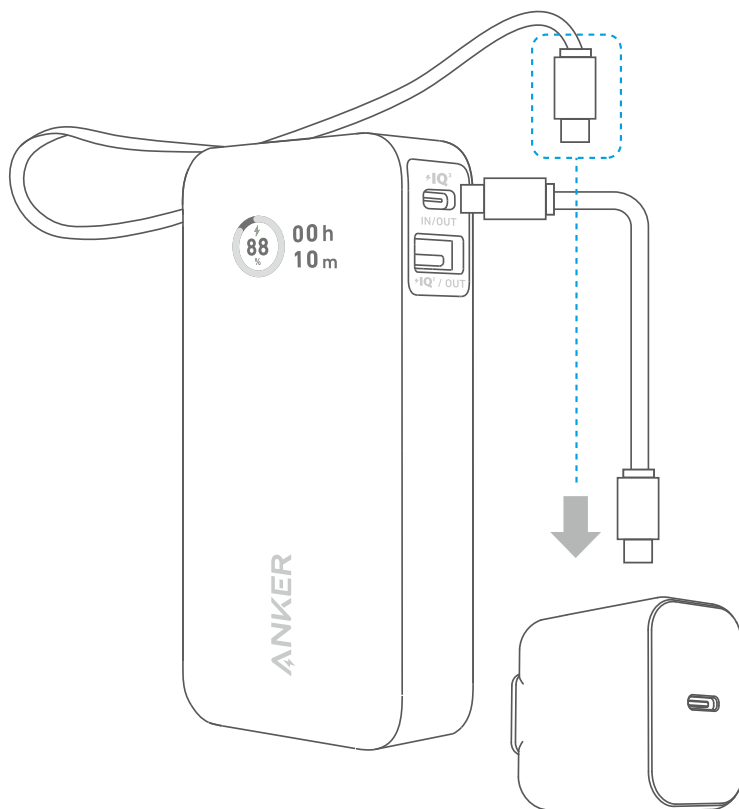


Trickle-Charging Mode

When charging low-power devices, double-press the button to activate low-current mode if using the USB-A port. The USB-C port can automatically adjust to directly charge low-power devices.


1. Activate trickle-charging mode.

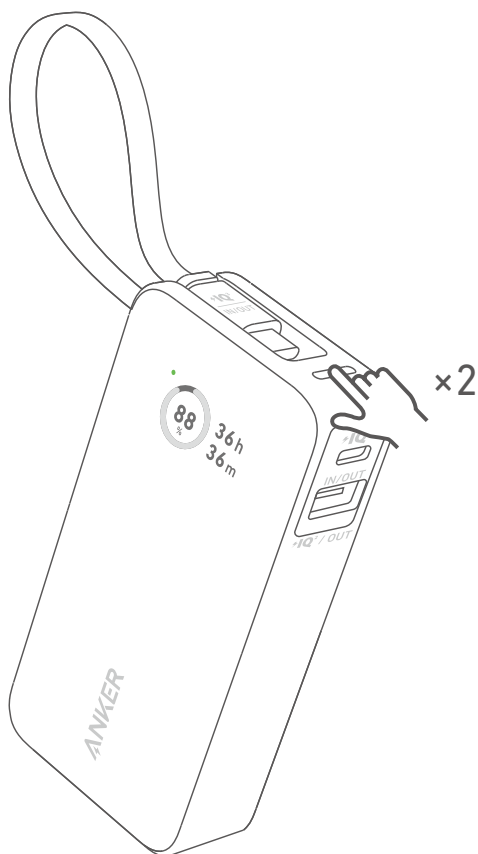

2. Charge your earbuds or other lower-power devices using the trickle-charging mode.

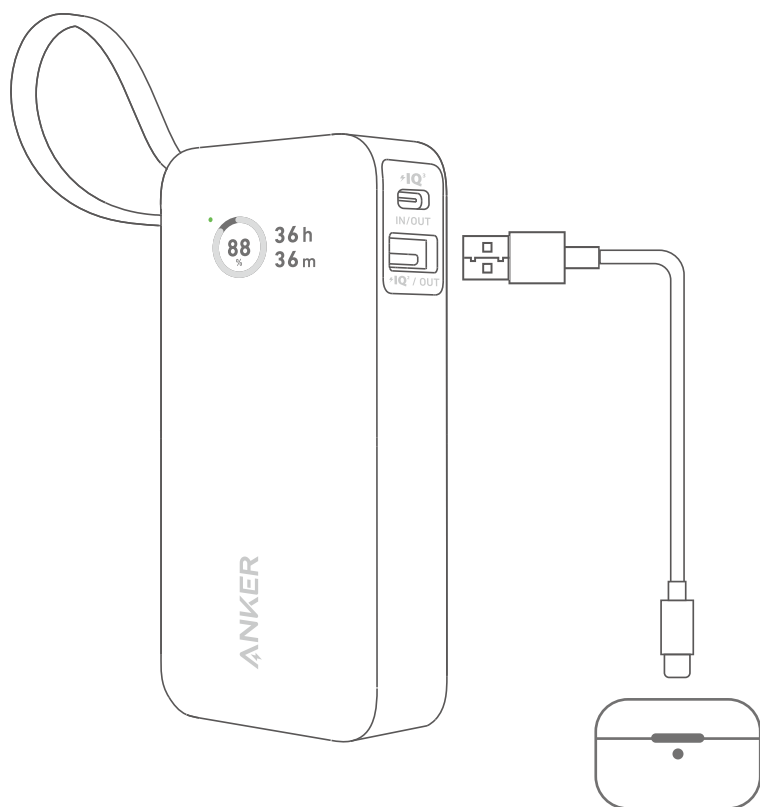

3. Exit trickle-charging mode.

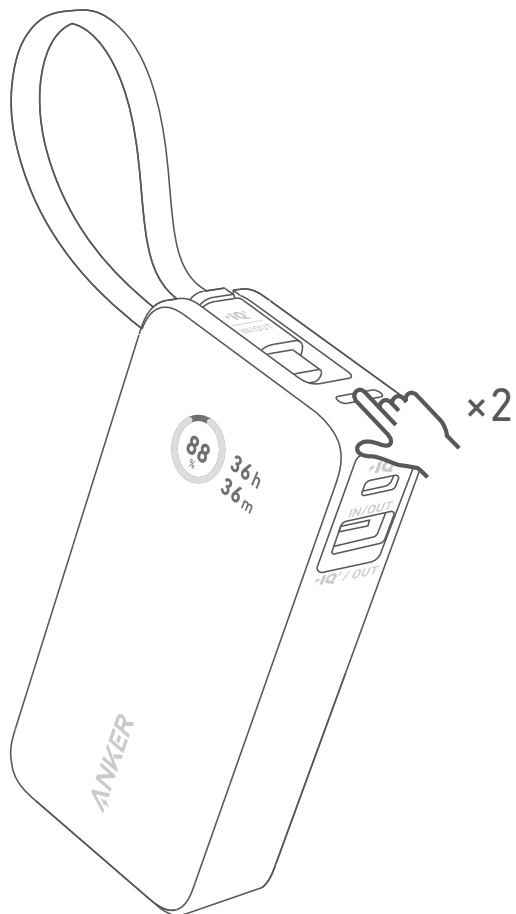

Specifications

Cell Capacity	10,000mAh (5,000mAh ×2)
USB-C Cable / Port Input	30W Max (5V ≡ 3A / 9V ≡ 3A / 15V ≡ 2A / 20V ≡ 1.5A)
USB-C Cable / Port Output	30W Max (5V ≡ 3A / 9V ≡ 3A / 10V ≡ 2.25A / 12V ≡ 2.5A / 15V ≡ 2A / 20V ≡ 1.5A)
USB-A Output	22.5W (5V ≡ 4.5A / 9V ≡ 2.5A / 10V ≡ 2.25A / 12V ≡ 1.5A)
Total Output	24W Max

* As a result of the inherent characteristics of lithium batteries, the usable battery capacity will gradually degrade and charge/discharge performance may diminish with extended use and accumulated charge/discharge cycles. This is a normal phenomenon resulting from lithium battery aging.